

Aero Design Ltd.**Work Order Control Sheet**Work Order#: **2016-74** Date Opened: **12 May 2016** Title: **Assembly**Aircraft OEM: **Eurocopter** Aircraft Model: **AS350** Product Type: **Cargo Basket** Product Model: **XL Ski** Quantity: **1****Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
 Additional Work Sheets (Standard Practice)
 Drawings (See List Below)
 Parts Distribution Sheet
 Sub Component Tags
 Completed Certification
 Time Sheet (R&D)
 Notes

Initial or N/A

JC
N/A
JC
JC
N/A
JC
N/A
N/A

Build Sheet Contents

Tasks Initialled
 Dual Inspections Initialled

Initial or N/A

JC
JC

Drawing List

Drawing #	Rev #	Description	Initial or N/A
94010	1	Basket Assembly	JC
70405	4	Lid Walkway Mod.	JC
84240	0	Lid Brace Installation	JC
84255	2	Handle Installation	JC
94027	1	Placard	JC

Traveller

Install walkway on lid
 Install lid on basket body
 Re-tap mounting lug holes and install mount lugs
 Install handle brackets
 Install handle
 Install lid prop
 Install data plate

Initial or N/A

DB
DB
DB
DB
DB
DB
DB

Work performed by:

Print: **D. Bartfai**

ICC / Dual Inspection performed by:

Print: **J. Clarke**

Work Order closed by:

Print: **J. Clarke**

Approved Manufacturing Facility 73-04

Sign:

Sign:

Sign:

Form 20.D.03

Component Completion

Quantity Complete on This Work Order
 Quantity Incomplete on This Work Order
 Further Processing Required Before Release
 Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Certification

Form One Completed
 Serviceable (Green) Tag Completed
 In Process (Yellow) Tag Completed
 Unserviceable (Red) Tag Completed
 Parts Placed in Stores for Distribution

Initial or N/A

JC
N/A
N/A
N/A
N/A

Additional Documentation

Documentation of a minor change
 Non-Conformance Report Required
 Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
 Research and Development
 Third Party

Initial or N/A

JC
N/A
N/A

SCA: AD07

SCA: AD02

SCA: AD02

Date: **12 MAY 2016**Date: **13 MAY 2016**Date: **13 MAY 2016**

Rev. Original 23 Sep 2014



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: HANDLE ASSEMBLY (LONG) QTY 1

Manufacturer: AERO DESIGN

Part No.: 84261-01 Serial / Batch No.: N/A

TTSN: N/A TSO: N/A Rem.: N/A

Work Order No.: 2016-52

Remaining Tasks to be Performed: NONE

Signature: JH Calh.

Date: 06 MAY 2016 Lic. No. / ACA AD 73-04 02

Serviceable



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04


Remarks

Serviceable

2016-74

NOTES:

1. THIS DRAWING IS AN ALTERNATE CONFIGURATION FOR THE HANDLE INSTALLATION SHOWN ON DRAWING 36255.
2. GREASE BUSHING (ITEM 04) USING MOBILGREASE 28 OR EQUIVALENT PRIOR TO INSTALLATION.

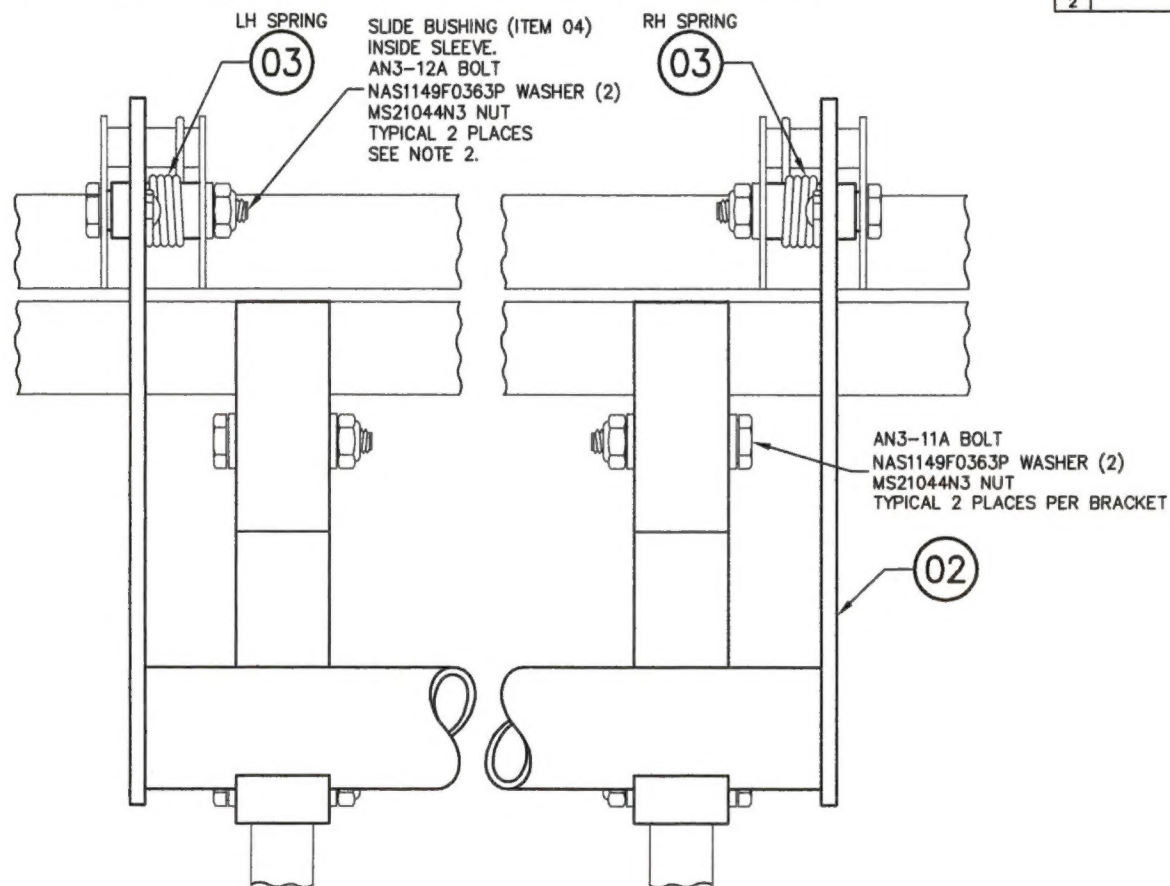


01 HANDLE INSTALLATION

A/R	MOBILGREASE 28		GREASE	MIL-PRF-81322F
4	AN3-11A		BOLT	
2	AN3-12A		BOLT	
10	NAS1149F0363P		WASHER	
6	MS21044N3		NUT	
2	84267-01	05	BRACKET	
2	36275-01	04	BUSHING	
2	36278-01	03	SPRING (1 LH, 1 RH)	
1	84261-01	02	HANDLE BAR ASSEMBLY	
	84255-01	01	HANDLE INSTALLATION	
01	PART NO.	ITEM	DESCRIPTION	MATERIAL
QTY.	LIST OF MATERIALS			

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE - CREATED FROM 36255	BJC	NOV 03/09
1	HANDLE END BRACKETS FLIPPED	BJC	SEPT 19/11
2	TITLE BLOCK UPDATED; ADD NOTE 2; HARDWARE UPDATED	BJC	MAR 13/14

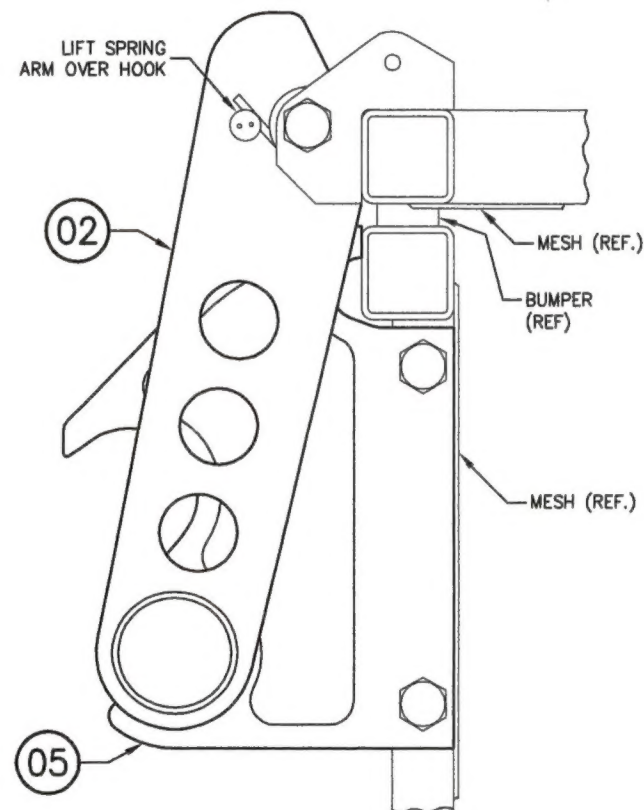

APPROVALS	DATE
DRAWN: JEFF CLARKE	03 NOV 2009
CHECKED: E. BURGON	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2°
X.XX ±0.03
X.X ±0.1



AERO DESIGN LTD.

9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.483.2976 www.aerodesign.ca


HELICOPTER CARGO BASKET
HANDLE BAR INSTALLATION

SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A3	84255	2

2016-74

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE	*	*

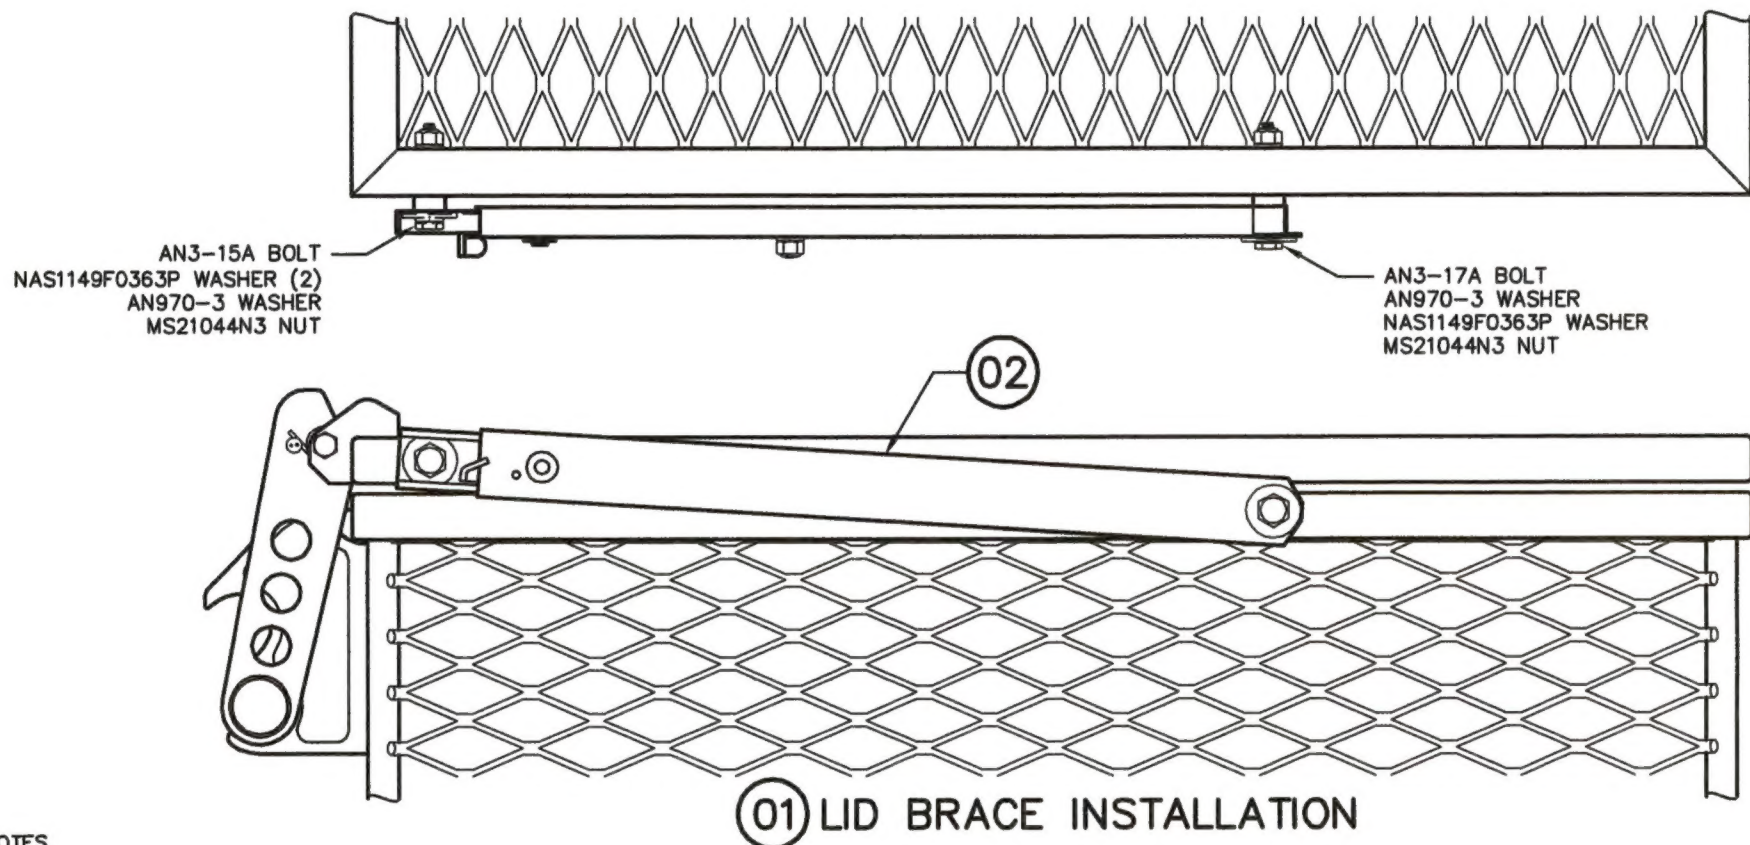


NOTES

1. THIS DRAWING APPLIES TO ALL AERO DESIGN LTD. CARGO BASKET ASSEMBLIES.
LID PROP IS TO BE INSTALLED ON THE FORWARD END OF THE BASKET AS INSTALLED ON THE HELICOPTER.

2	MS21044N3		NUT
3	NAS1149F0363P		WASHER
2	AN970-3		WASHER
1	AN3-17A		BOLT
1	AN3-15A		BOLT
1	36280-01	02	LID BRACE ASSEMBLY
	84240-01	01	LID BRACE INSTALLATION
01	PART NO.	ITEM	DESCRIPTION
QTY.	LIST OF MATERIALS		

APPROVALS	DATE
DRAWN: JEFF CLARKE	21 MAY 2014
CHECKED: JASON REKVE	21 MAY 2014
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2° X.XX ±0.03 X.X ±0.1	

		AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604.485.2376 www.aerodesign.ca	
		HELICOPTER CARGO BASKET ALL MODELS LID BRACE INSTALLATION	
NOT TO SCALE	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A4	84240	0

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No. 2016-0062
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2016-74
6. Item 1.	7. Description Cargo Basket	8. Part Number 94010-01	9. Qty. 1	10. Serial/Batch No. 94001-63	11. Status/Work New
12. Remarks Modified with walkway on lid IAW DCL704					
13a. Certifies that the items identified above were manufactured in conformity to: <input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12 Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.		
13b. Signature  AD 73-04 02		13c. Approved Organization Number AMF 73-04		14b. Signature	
13d. Name Jeff Clarke - AD02		13e. Date (dd/mmm/yyyy) 13 May 2016		14c. Approved Organization Number	
				14d. Name	
				14e. Date (dd/mmm/yyyy)	
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>					

SKY DANCE HELI



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:	1	
PN:	N/A	
Aircraft:	Multiple	Model: Multiple
Description:	5 7/8" x 10' Aluminum Checkerplate .065"	
Supplier:	Daigle Marine	
Color:	N/A	
WO#:	N/A	PO# 16017

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: 2016-74

AS 30 XL SKI
w/w

Date Open: 13 MAY 2016

AD
73-04
07

1. Lid Assembly

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

AD
73-04
07

2. Body Assembly

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

AD
73-04
07

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

AD
73-04
07

- d. Record PO of hinge and rivets on attached material tracking list.

4. Install Handle

- a. Install handle brackets.
- Set 84267-01 handle bracket on provisions in hoops, 2 places.
 - Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
 - Torque AN3 bolts to ??.
- b. Install handle
- Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
 - Grease two 36275-01 bushings with ?? Insert into bushings of handle assembly.
 - Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
 - On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
 - At first end, remove bolt and repeat step iv.
 - Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
 - Torque AN3 bolts to ??.
- c. Check handle
- Operate handle to ensure handle does not bind and springs hold handle in.
 - Snap handle into brackets to ensure handle locks.

- d. Record PO/WO of all parts used in steps above on attached material tracking list.

AD
73-04
07

5. Install lid brace

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

6. Final Inspection

Dual inspection by a different person than assembled the basket.

a. Check for general condition and correct assembly:

- i. Bolts are tight
- ii. Rivets are installed correctly
- iii. Handle operates correctly
- iv. Lid brace operates correctly

b. Check that PO/WO numbers have been recorded.

~~AO~~
73-04
02

CARGO BASKET ASSEMBLY - COMMON

2016-74

AS350 xl ski

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket

94510, Revision 0 – Extra-Wide Low Mounted Basket

94610, Revision 0 – Extra-Wide Low Mounted Ski Basket

76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket

76410, Revision 3 – Medium Basket (left or right)

78410, Revision 2 – Long Basket

→ 94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket

80310, Revision 0 – Medium Basket

81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket

95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

→ 70405, Revision 3? – Lid Walkway

48.

Work Order: 2016-74Date Opened: 13 MAY 2016

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

1 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/NO
	<u>1</u>		94010-01	Cargo Basket Assembly	<u>94001-63</u>	
Step 1				<i>Lid Assembly</i>		
Step 1.a.	. 1		94012-01	Basket Lid Assembly		<u>2016-48</u>
	. . 4		49205-14	Bumper	Argus Industries Bumper	
Step 1.b.	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
	. . 1		94027-01	Placard	0.063 Sheet, 6061-T6 Aluminum	<u>2015-03</u>
	. . 4		CR3213-4-02	Cherry Rivet		<u>15086</u>
Step 1.c. (option)	. 1		70405-01	Lid Step Modification		
	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	<u>16017</u>
	. . A/R		CR3213-4-02	Cherry Rivet		<u>15086</u>
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		94011-01	Basket Body Assembly		<u>2016-48</u>
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	
	. . 8		AN960-616	Washer		
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	95"	<u>15069</u>
	. 8		CR3523-5-02	Cherry Rivet		<u>15031</u>
	. A/R		CR3213-5-02	Cherry Rivet		<u>15086</u>
Step 4	. 1		84255-01	<i>Handle Installation</i>		
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	<u>2016-37</u>
	. . 4		AN3-11A	Bolt		
	. . 8		NAS1149F0363P	Washer		
	. . 4		MS21044N3	Nut		

Work Order: 2016-74Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

2 of 2

Date Opened: 13 MAY 2016

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly		2016-50
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	
	.. 2		AN3-12A	Bolt		
	.. 4		NAS1149F0363P	Washer		
	.. 2		MS21044N3	Nut		
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		2016-32
	. 1		AN3-15A	Bolt		
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				Inspection	None	



WO# _____

Approved Manufacturing Facility 73-04

Form 20.F.06

Rev. Original 27 May 2013



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 25
PN: MS20001P4-9600
Aircraft: All
Description: Hinge
Supplier: GKN Bandy
Color: N/A
WO#: N/A

Model: All

PO# 15069

Technical drawing of a rectangular mesh assembly, likely a filter or screen, showing dimensions and callouts.

Dimensions:

- Overall width: 7.5
- Overall height: 7.5
- Inner rectangular area: 6.0 (width) x 6.0 (height)
- Distance from inner area to outer edge: 0.1 (typical)
- Distance from inner area to outer edge: 0.19 (typical)
- Distance from inner area to outer edge: 0.06 (typical)

Callouts and Notes:

- 03: 2 PLACES
- 04: MIN 0.06 TYP
- 0.1 SETBACK ON ENDS
- DRILL #30 (0.129) CENTRE RIVETS ON TUBES SPOT FACE #0.25 IF REQ.
- 0.19 MIN TYP
- 8.9 TREAD PLATE
- 6.0 TUBES
- RUN BEAD OF COMMERCIAL RTV SILICONE SEALANT ALONG ALL TUBES BELOW TREAD PLATE BEFORE INSTALLATION


SECTION A-A

REV	DESCRIPTION OF CHANGE	INITIALS	DATE
1	ADD BELL MEDIUM AND EUROCRYPTO ASS350 BASKETS, CHANGE TUBES	BUC	MAR 19/08
2	ADD EUROCRYPTO EC353, MCDONNELL DOUGLAS M600BN, BELL 206B BASKETS	BUC	DEC 4/08
3	ADD NEW ASS350 AND 206L/407 MODELS	BUC	DEC 4/08
4	TITLE BLOCK UPDATED; MODEL LIST REMOVED; ADD ALT. R1VET; ADD NOTE 7	BUC	28/05/2010

- NOTES:

1. THIS DRAWING IS AN OPTIONAL CONFIGURATION ADDING A TREAD PLATE STEP TO THE LID. THIS CONFIGURATION MAY BE APPLIED TO ANY OR ALL BAYS OF THE LID. REMAINDER OF LID ASSEMBLY IS TO BE FABRICATED IN ACCORDANCE WITH THE APPLICABLE DRAWINGS.
2. TUBES (ITEM 03) MUST BE WELDED IN PLACE BEFORE MESH IS WELDED ON BOTTOM.
3. REMOVE ALL BURRS AND BREAK SHARP EDGES.
4. WELDING TO 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AMS 2855C.
5. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT.
6. WHEN ASSEMBLY IS COMPLETE, FILL ALL VENT HOLES WITH ROSETTE WELD.
7. THOROUGHLY CLEAN AND POWDER COAT BASKET SUB-ASSEMBLIES PRIOR TO ASSEMBLY. INSTALL TREAD PLATE AFTER POWDER COATING.
8. WELD AND POSITION TREAD PLATE TO MATCH LID DOOR INSTALLED IN ACCORDANCE WITH DRAWING 72462 ON ADJOINING BAY OF THE LID.

A/R	CR3213-4-02	BLIND RIVET	ALTERNATE: HR3213-4-02		
1	70405-04	04 TREAD PLATE	ALUMINUM	COMMERCIAL	0.063 TREAD PLATE
2	70405-03	03 TUBE	4130 STEEL COND. N	MIL-T-6758	0.5 X 0.035 WALL TUBE
1	SEE NOTE 1	02 BASKET LID ASSEMBLY			
	70405-01	01 BASKET LID ASSEMBLY - MODIFIED WITH STEP			
01	PART NO.	ITEM DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
QTY	LIST OF MATERIALS				

BASIC CODE REF. NAS 523		DASH NO. FOR DIAMETER W=INFD. HEAD NEAR SIDE F=INFD. HEAD FAR SIDE	APPROVALS DRAWN: JEFF CLARKE CHECKED: E BURDON	DATE 21 SEPT 2008	 AERO DESIGN LTD. 6888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604.463.5737 www.aerodesign.ca
C=COUNTERSINK D=DIMPLE DIGIT=# OF SHEETS TO BE DIMPLED		DASH NO. FOR LENGTH	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON:		
BASIC CODES: B1=MS20470AD B2=MS20462AD ARN=CR3213 ARN=CR3212		+ ⊕ INSTALL NEW RIVET + ⊕ REMOVE/REPLACE RIVET - ⊖ EXISTING RIVET	DECIMALS X.XX ±0.010 X.XX ±0.03 X.X ±0.1	ANGLES ±1/2°	SCALE 1 : 1.5 SHEET 1 OF 1
			DIMG. SIZE DIMG. NO. A1 70405 4		REVISION 4


2016-74

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; UPDATE ADDRESS AND LOGO; MAT'L THICKNESS CHANGED	BJC	10/07/2014

NOTES

1. ENGRAVE 0.007 DEEP AS FOLLOWS:
 "QUICK RELEASE BASKET" - 0.125 HIGH
 "EUROCOPTER AS350 & AS355 SERIES" - 0.080 HIGH
 "S/N 94001-XX" - 0.080 HIGH
 "MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
 "300 LBS/136 KG" - 0.200 HIGH
 "AERO DESIGN LTD." - 0.125 HIGH
 "POWELL RIVER, BC, CANADA" - 0.080 HIGH
 "www.aerodesign.ca" - 0.080 HIGH


DRILL #30 (0.129)
4 PLACES

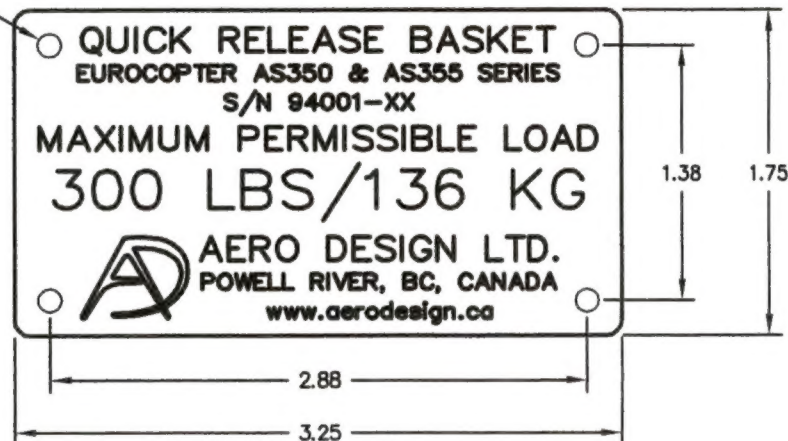

01 PLACARD


94027-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.050 SHEET
PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE

LIST OF MATERIALS


THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.	APPROVALS DRAWN: R. RATHWELL CHECKED: E. BURGAIN	DATE OCT 3, 2011	 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 804.483.2376 www.aerodesign.ca	EUROCOPTER AS350 & AS355 SERIES QUICK RELEASE CARGO BASKET PLACARD							
	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2" X.XX ±0.03 X.X ±0.1							SCALE 1 : 1 SHEET 1 OF 1	DWG. SIZE A4	DWG. NO. 94027	REV. 1

216-74


REV	DESCRIPTION OF CHANGE	INITIALS	DATE
1	UPDATE WITH BLACK, NOT ALUMINUM, HARDWARE FOR UPDATES		10/27/2014
CHANGE BRACE ASSEMBLY TO INSTALLATION			

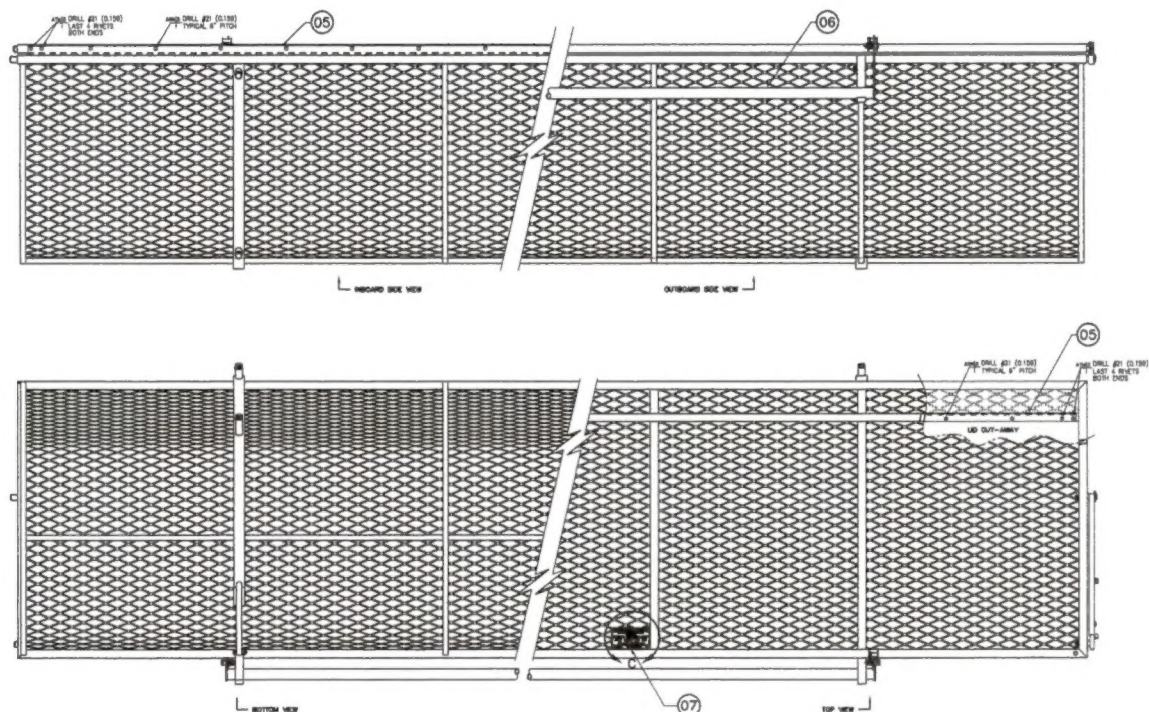


94010-01 CARGO BASKET ASSEMBLY - RH

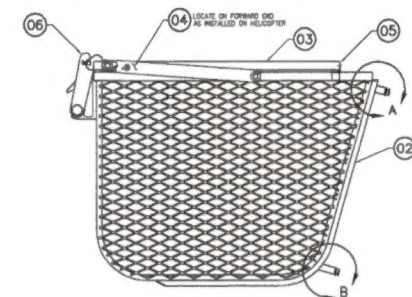


DETAIL A
SCALE 1 : 1
TYPICAL FRONT AND REAR



DETAIL B
SCALE 1 : 1
TYPICAL FRONT AND REAR

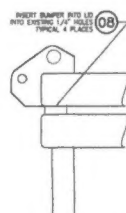

BUMPER INSTALLATION
SCALE 1 : 1

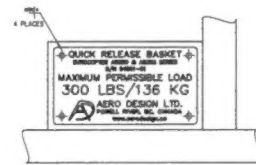

DETAIL C
SCALE 1 : 1
LOOKING AT PLACED BRACKET

NOTE:
1. ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY. DIMENSIONS OF COMPONENTS AND COMPLETE ASSEMBLY ARE DETERMINED IN PREVIOUS STEPS.

ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK USE
1	WASHER			
2	WASHER			
3	WASHER			
4	WASHER			
5	WASHER			
6	WASHER			
7	WASHER			
8	WASHER			
9	WASHER			
10	WASHER			
11	WASHER			
12	WASHER			
13	WASHER			
14	WASHER			
15	WASHER			
16	WASHER			
17	WASHER			
18	WASHER			
19	WASHER			
20	WASHER			
21	WASHER			
22	WASHER			
23	WASHER			
24	WASHER			
25	WASHER			
26	WASHER			
27	WASHER			
28	WASHER			
29	WASHER			
30	WASHER			
31	WASHER			
32	WASHER			
33	WASHER			
34	WASHER			
35	WASHER			
36	WASHER			
37	WASHER			
38	WASHER			
39	WASHER			
40	WASHER			
41	WASHER			
42	WASHER			
43	WASHER			
44	WASHER			
45	WASHER			
46	WASHER			
47	WASHER			
48	WASHER			
49	WASHER			
50	WASHER			
51	WASHER			
52	WASHER			
53	WASHER			
54	WASHER			
55	WASHER			
56	WASHER			
57	WASHER			
58	WASHER			
59	WASHER			
60	WASHER			
61	WASHER			
62	WASHER			
63	WASHER			
64	WASHER			
65	WASHER			
66	WASHER			
67	WASHER			
68	WASHER			
69	WASHER			
70	WASHER			
71	WASHER			
72	WASHER			
73	WASHER			
74	WASHER			
75	WASHER			
76	WASHER			
77	WASHER			
78	WASHER			
79	WASHER			
80	WASHER			
81	WASHER			
82	WASHER			
83	WASHER			
84	WASHER			
85	WASHER			
86	WASHER			
87	WASHER			
88	WASHER			
89	WASHER			
90	WASHER			
91	WASHER			
92	WASHER			
93	WASHER			
94	WASHER			
95	WASHER			
96	WASHER			
97	WASHER			
98	WASHER			
99	WASHER			
100	WASHER			

BASIC CODE	REF. NO.	DATE	APPROVALS	DATE
01	01	01	01	01
02	02	02	02	02
03	03	03	03	03
04	04	04	04	04
05	05	05	05	05
06	06	06	06	06
07	07	07	07	07
08	08	08	08	08
09	09	09	09	09
10	10	10	10	10
11	11	11	11	11
12	12	12	12	12
13	13	13	13	13
14	14	14	14	14
15	15	15	15	15
16	16	16	16	16
17	17	17	17	17
18	18	18	18	18
19	19	19	19	19
20	20	20	20	20
21	21	21	21	21
22	22	22	22	22
23	23	23	23	23
24	24	24	24	24
25	25	25	25	25
26	26	26	26	26
27	27	27	27	27
28	28	28	28	28
29	29	29	29	29
30	30	30	30	30
31	31	31	31	31
32	32	32	32	32
33	33	33	33	33
34	34	34	34	34
35	35	35	35	35
36	36	36	36	36
37	37	37	37	37
38	38	38	38	38
39	39	39	39	39
40	40	40	40	40
41	41	41	41	41
42	42	42	42	42
43	43	43	43	43
44	44	44	44	44
45	45	45	45	45
46	46	46	46	46
47	47	47	47	47
48	48	48	48	48
49	49	49	49	49
50	50	50	50	50
51	51	51	51	51
52	52	52	52	52
53	53	53	53	53
54	54	54	54	54
55	55	55	55	55
56	56	56	56	56
57	57	57	57	57
58	58	58	58	58
59	59	59	59	59
60	60	60	60	60
61	61	61	61	61
62	62	62	62	62
63	63	63	63	63
64	64	64	64	64
65	65	65	65	65
66	66	66	66	66
67	67	67	67	67
68	68	68	68	68
69	69	69	69	69
70	70	70	70	70
71	71	71	71	71
72	72	72	72	72
73	73	73	73	73
74	74	74	74	74
75	75	75	75	75
76	76	76	76	76
77	77	77	77	77
78	78	78	78	78
79	79	79	79	79
80	80	80	80	80
81	81	81	81	81
82	82	82	82	82
83	83	83	83	83
84	84	84	84	84
85	85	85	85	85
86	86	86	86	86
87	87	87	87	87
88	88	88	88	88
89	89	89	89	89
90	90	90	90	90
91	91	91	91	91
92	92	92	92	92
93	93	93	93	93
94	94	94	94	94
95	95	95	95	95
96	96	96	96	96
97	97	97	97	97
98	98	98	98	98
99	99	99	99	99
100	100	100	100	100

AERO DESIGN LTD.
QUICK RELEASE CARGO BASKET
BASKET ASSEMBLY (EXTRA LARGE)
SCALE 1 : 1
SHEET 1 OF 1
AO 94010 1